

Einbauanleitung



Roto ZRV M, ZRE M

EN Installation manual

FR Instructions de montage

NL Montagehandleiding

IT Guida per il montaggio

ES Instrucciones de montaje

PT Instruções de instalação

PL Instrukcja montażu

CZ Montážní návod

SK Návod na montáž

SI Navodila za vgradnjo

RU Руководство по монтажу

GR Οδηγίες τοποθέτησης

EE Paigaldusjuhend

LV Uzstādīšanas instrukcija

LT Montavimo instrukcija

 
 
RO Manual de montare

 
HU Beépítési útmutató

HR Upute za ugradnju

BG Монтажна инструкция



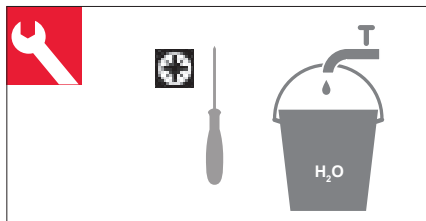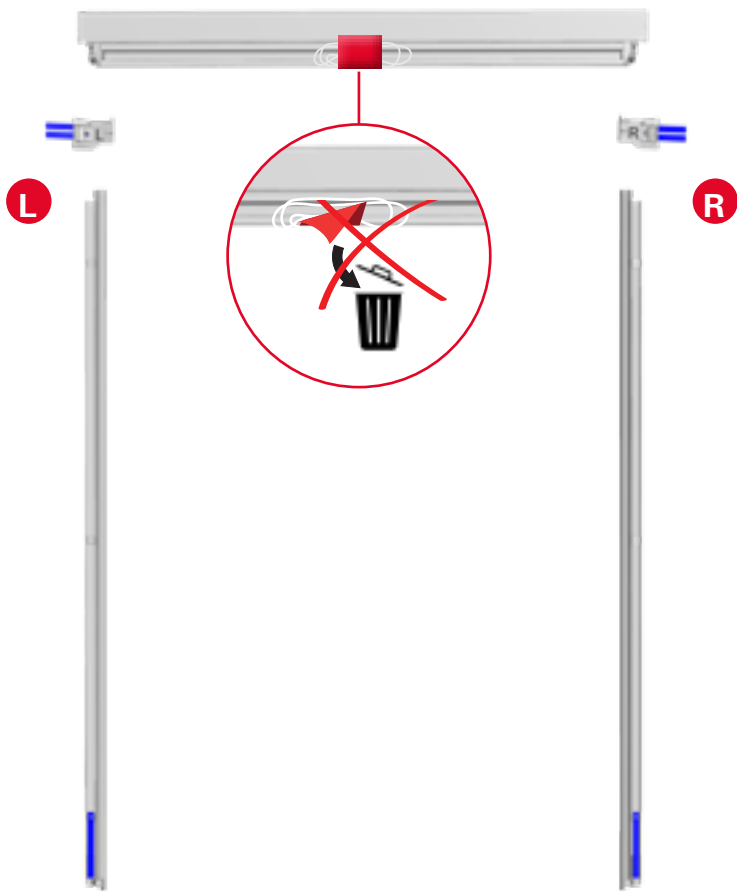

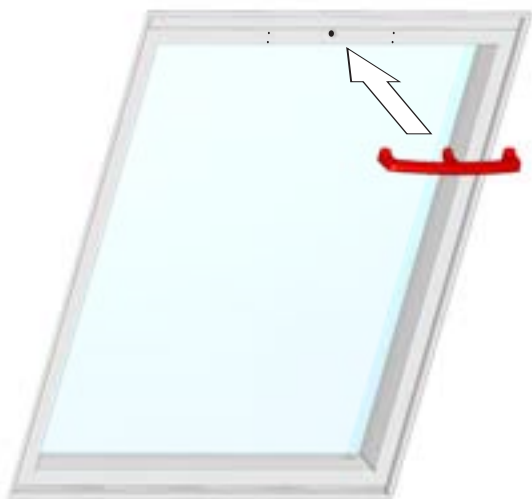

RotoQ

 
 
 




1







15 - 35 °C

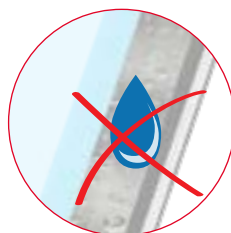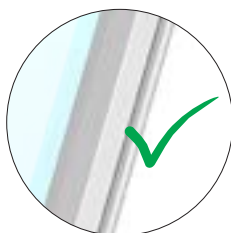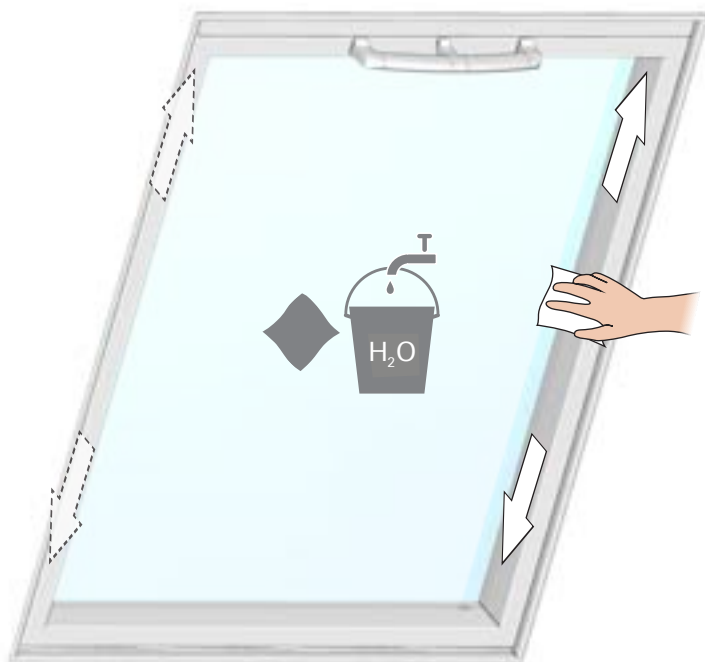






2

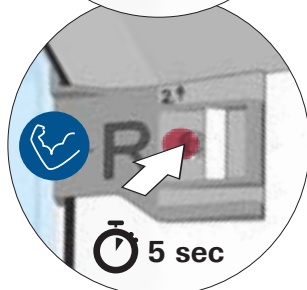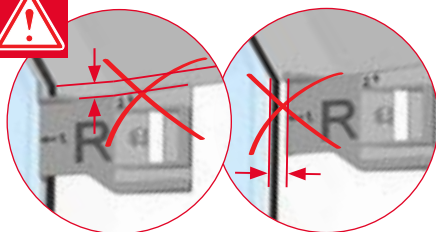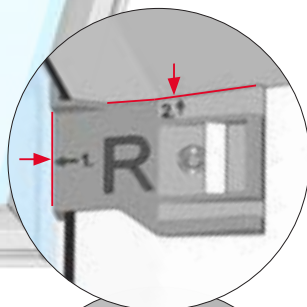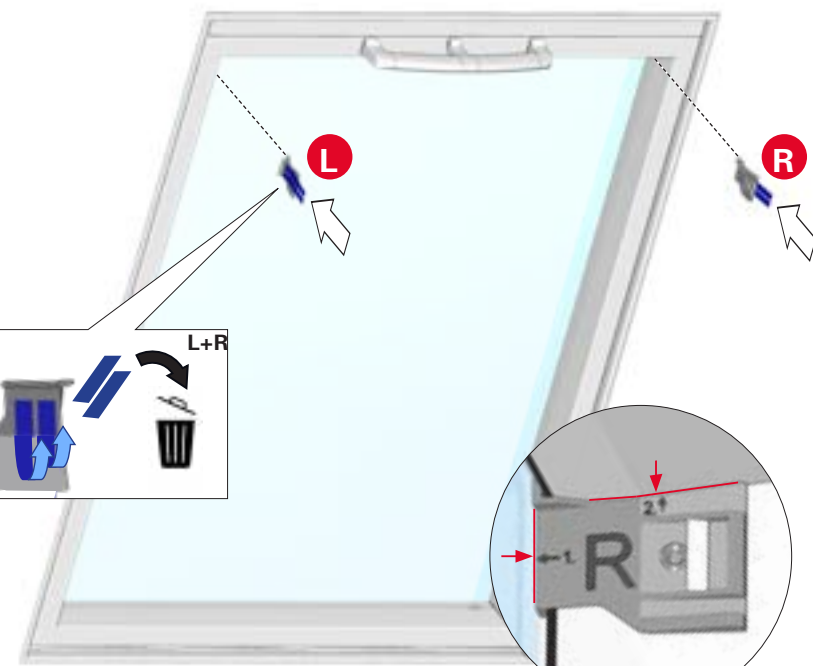    




3

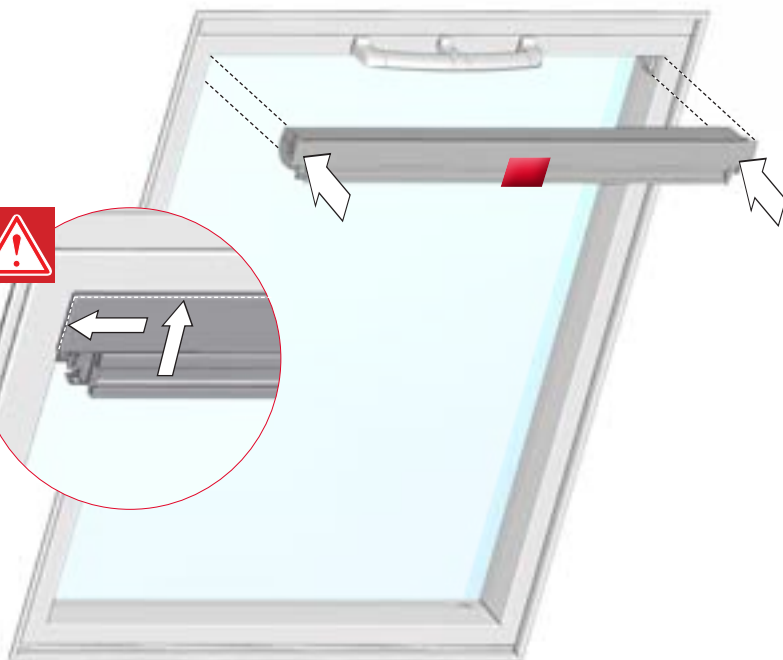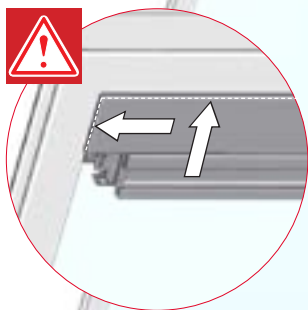   


4

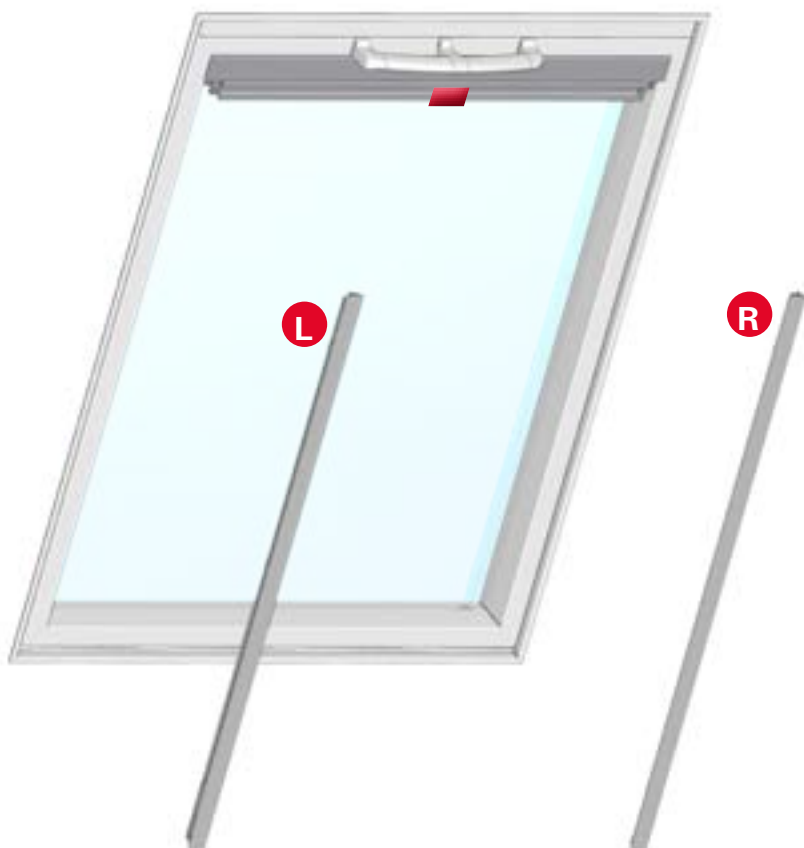 






5

 L + R

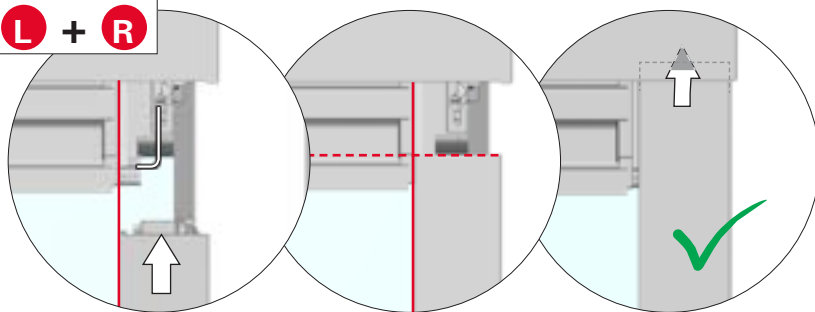







6

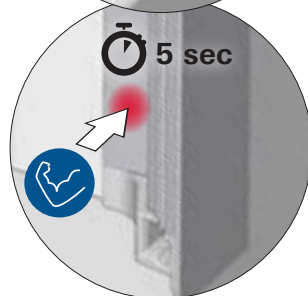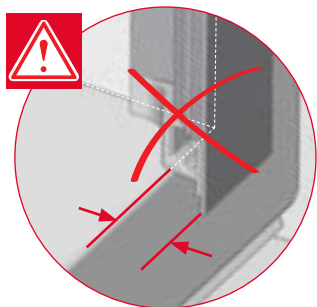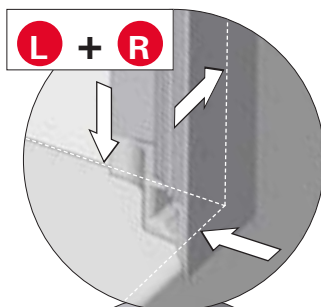   




7

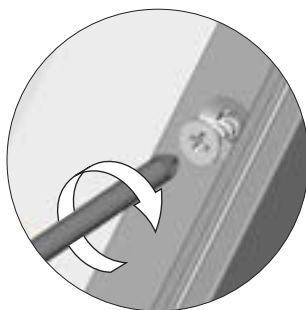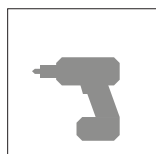   
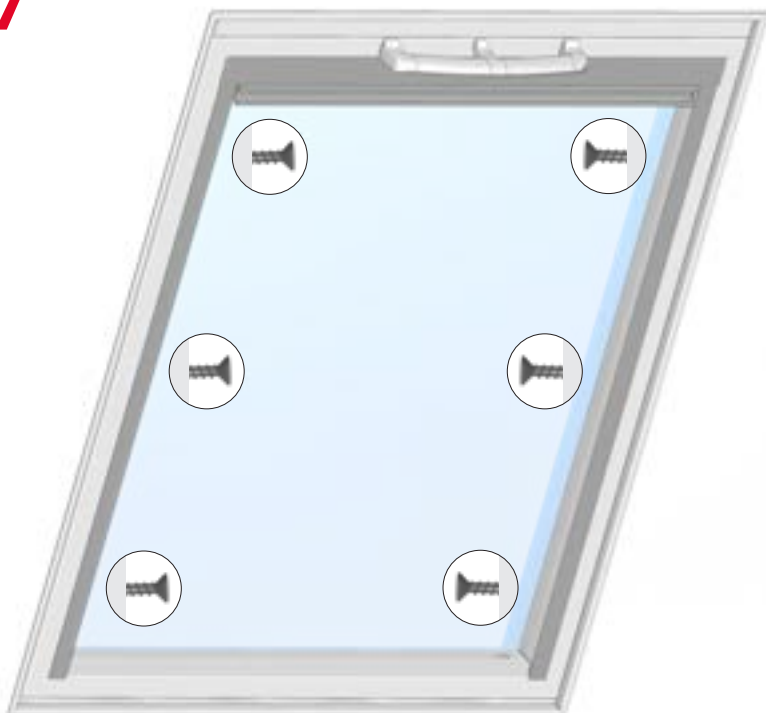 


8

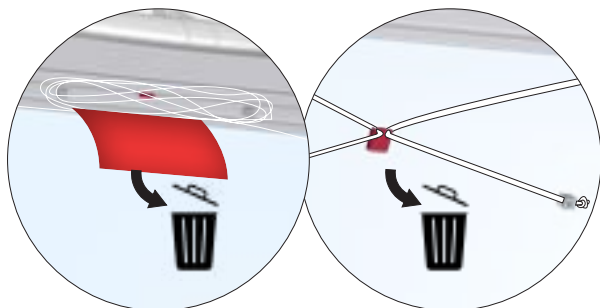 






9

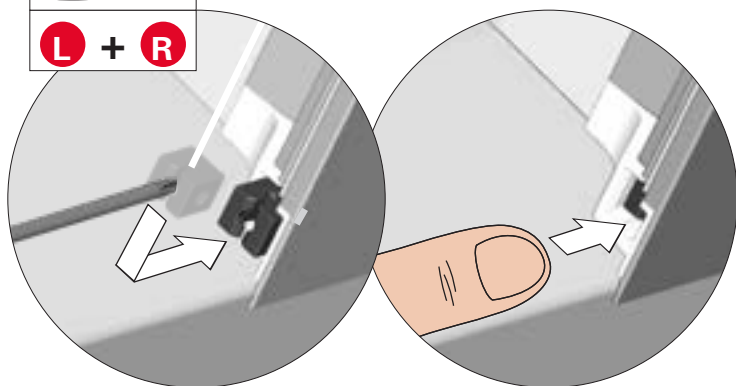  




10

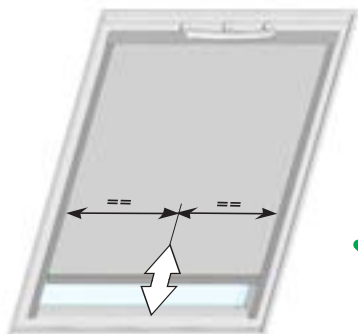 

SOS

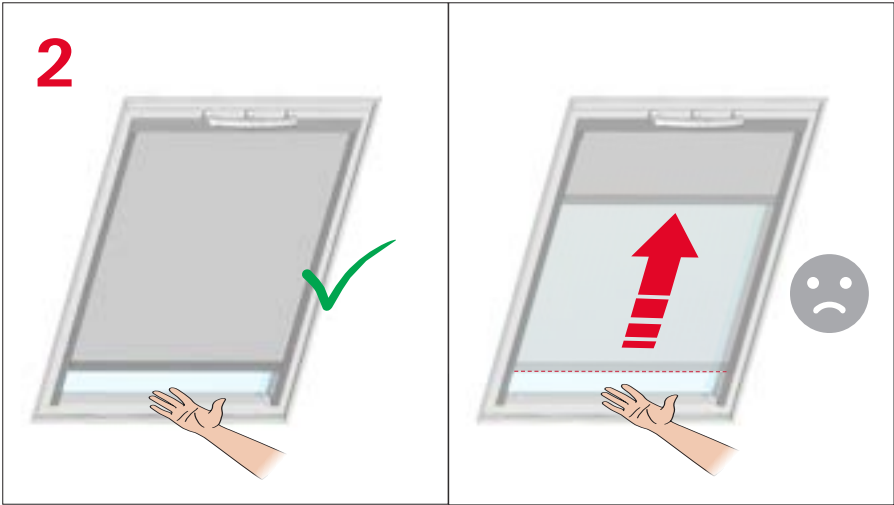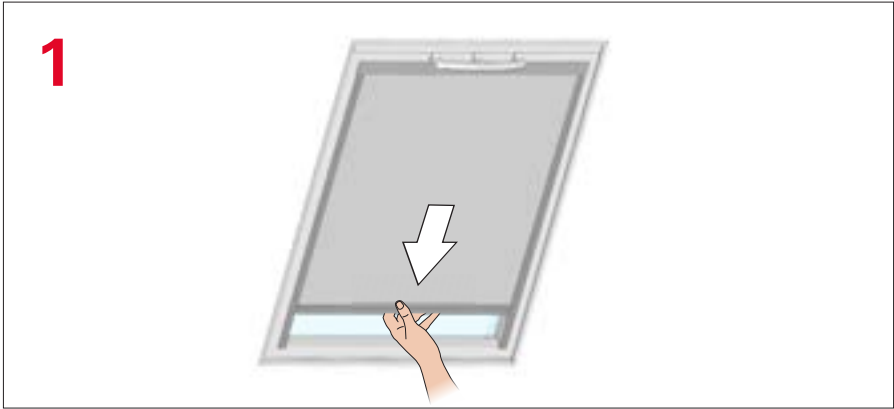  

3

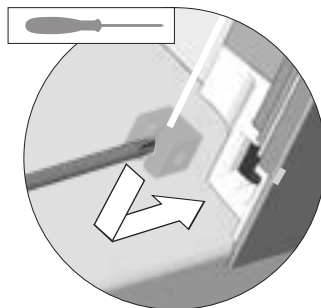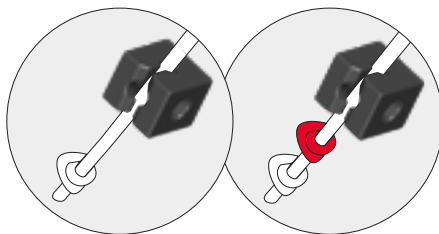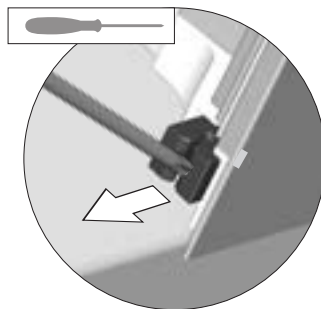   **L + R**



The roof window.



www.roto-contacts.com



www.roto-extra.com

Roto Dach- und Solartechnologie GmbH
Wilhelm-Frank-Straße 38-40
97980 Bad Mergentheim
Deutschland

